
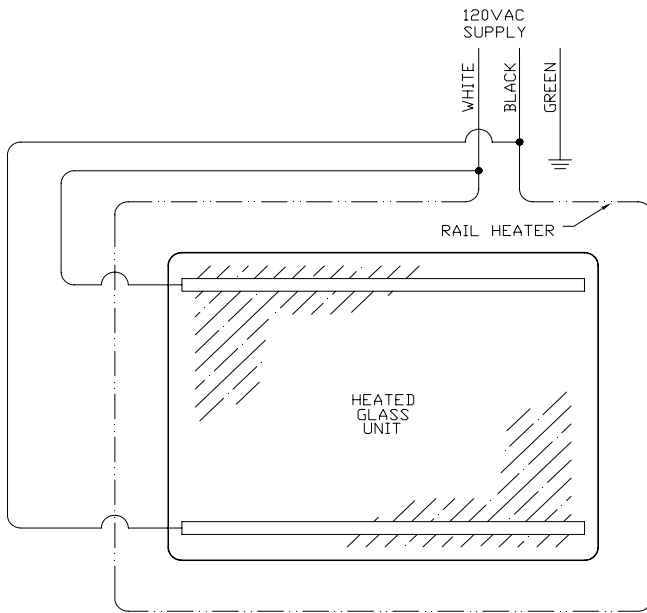


WINDOW INSTALLATION

1. If optional window trim kit is provided, install trim pieces into the wall opening from the cold side of the wall. The trim can be attached to the opening with screws or adhesive.
2. Install the window into the wall opening from the warm side of the wall. Secure the window with screws using the mounting brackets already attached to the window.
3. Fill any gaps between the window and the opening with caulk to prevent airflow.
4. If the window is a heated model, a qualified electrician should supply 120Vac to the leads in the junction box.

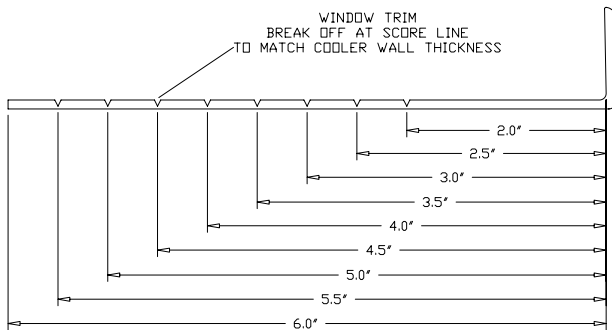

WINDOW WIRING SCHEMATIC

Contact Information

Gemtron Corporation
2840 Nebo Road
Madisonville, KY 42431
Toll Free: 800.326.2717
Fax: 270.326.3624
www.gemtrondoors.com